

PASSAGE PAIR TRIM ONLY-EUROPEAN ROUND ROSES




IDL0001 C

FITTING INSTRUCTION

DOOR LEVER


①

Counter Bore
 $\text{Ø} 19(3/4\text{'})$
 3mm (1/8") Deep
 Both Sides

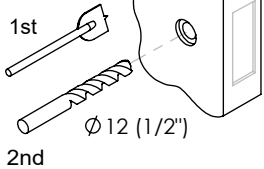


USE TEMPLATE-TDL001B


②

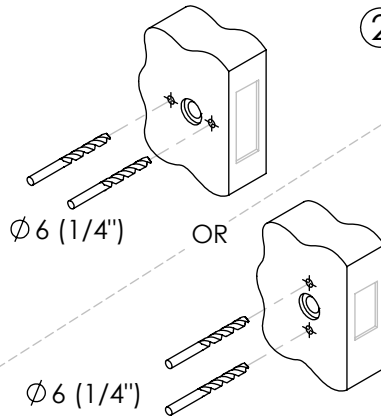


③

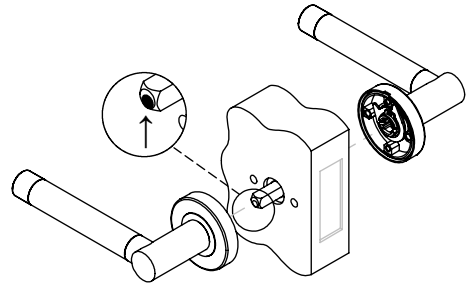




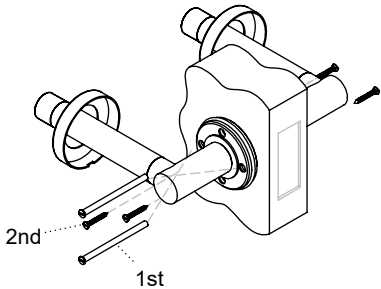

④

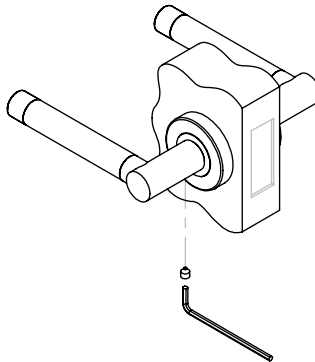

⑤



KIT FOR 45MM DOOR

- 1 x  8 x 8
- 2 x  M4 X 60
- 4 x  N4 X 3/4"
- 2 x  GRUB SCREW
M6 X 7
- 1 x  Allen Key
3mm