
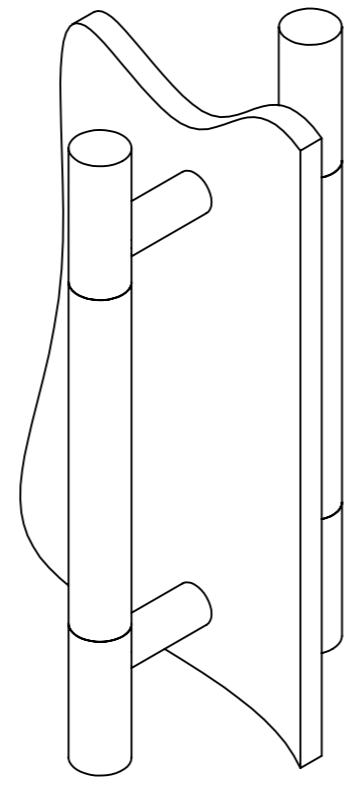
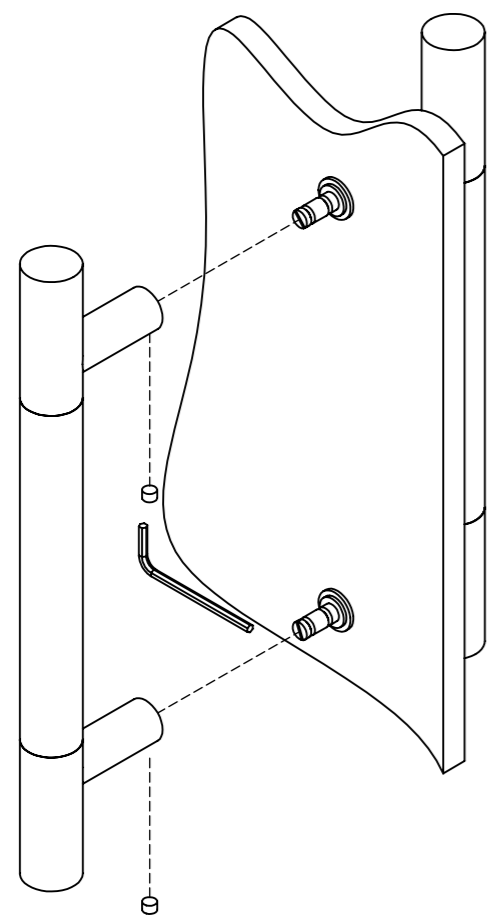
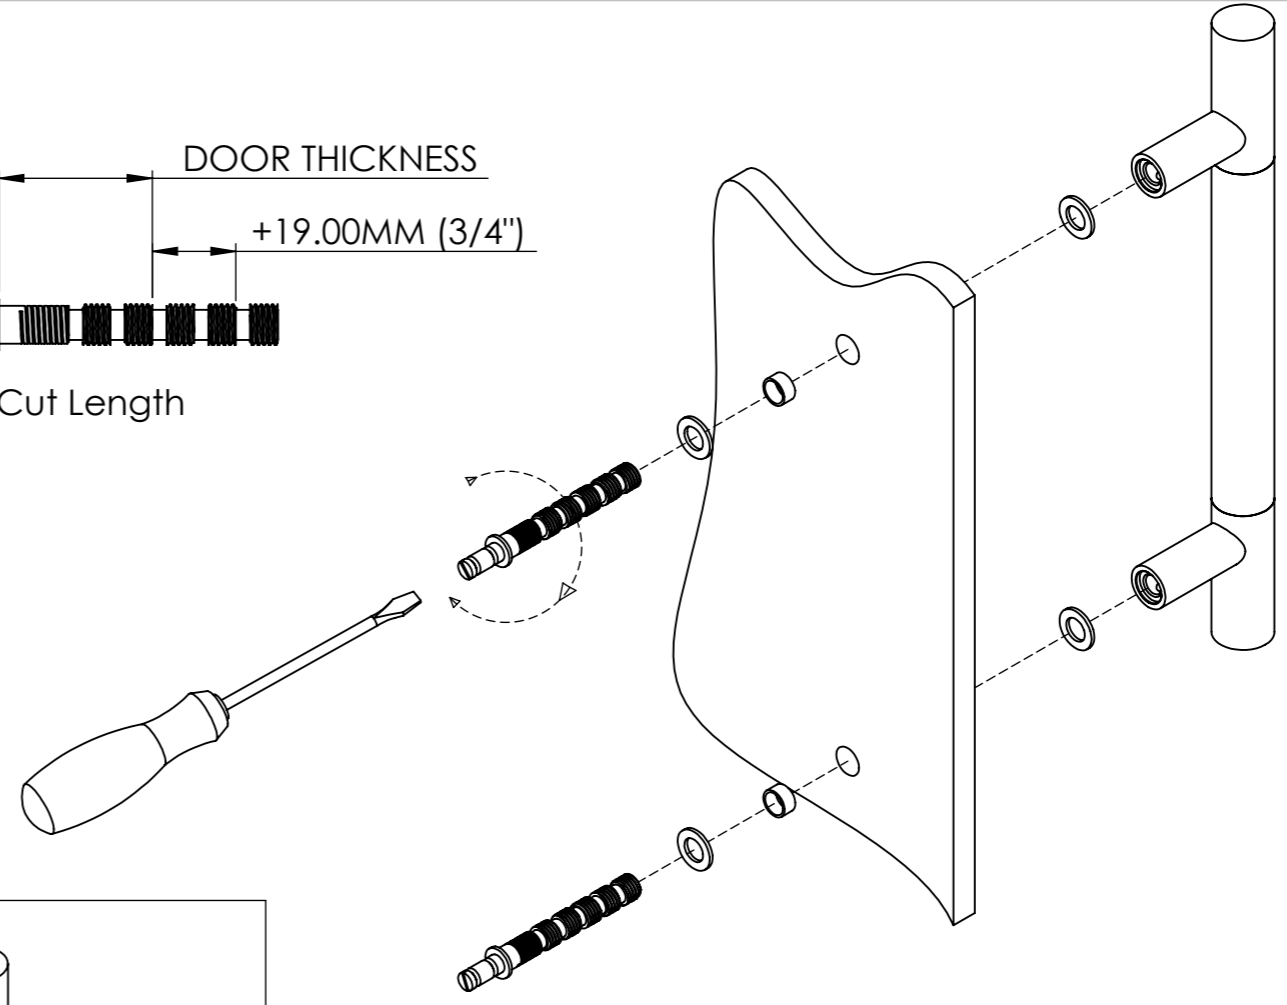
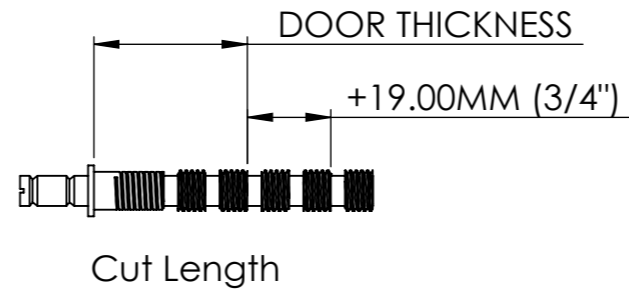



IDP-003-FITTING INSTRUCTION

DOOR PULL-BACK TO BACK PAIR-GLASS

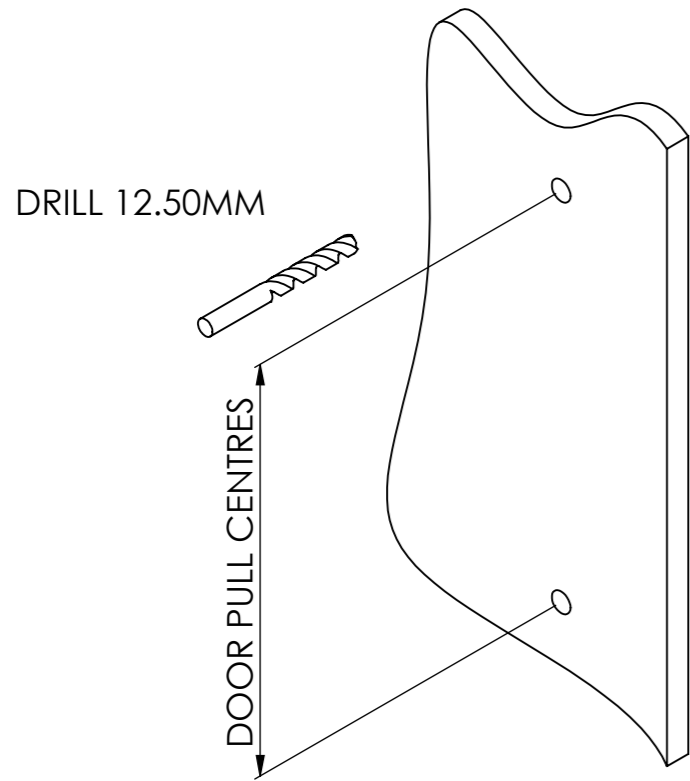


KIT

PART No PFX-0002-N-0080-A-30CP

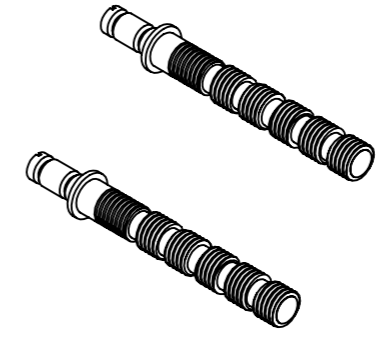



PART No FWH-00012-00010-0006TK-6000

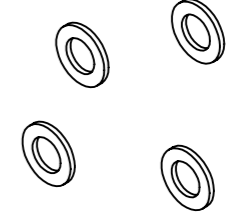

PART No FWH-00012-00010-0006TK-6000



PART No

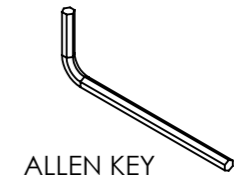

ALLEN KEY