


IMDK-003 - DOOR KNOB-SATURN & BANDED EGG-FITTING INSTRUCTIONS


FIXED DEAD-SINGLE-PAIR

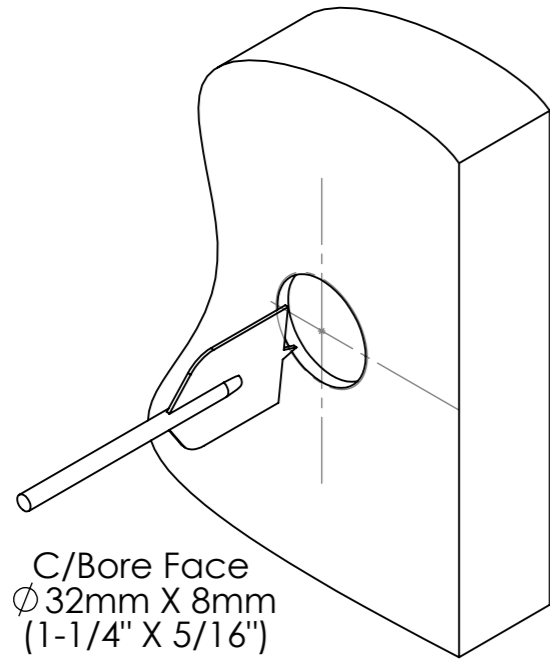


A




B

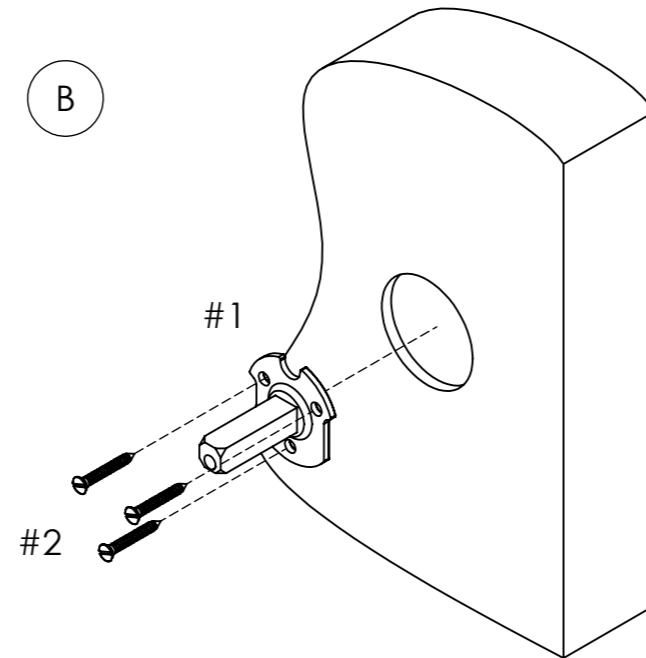

C

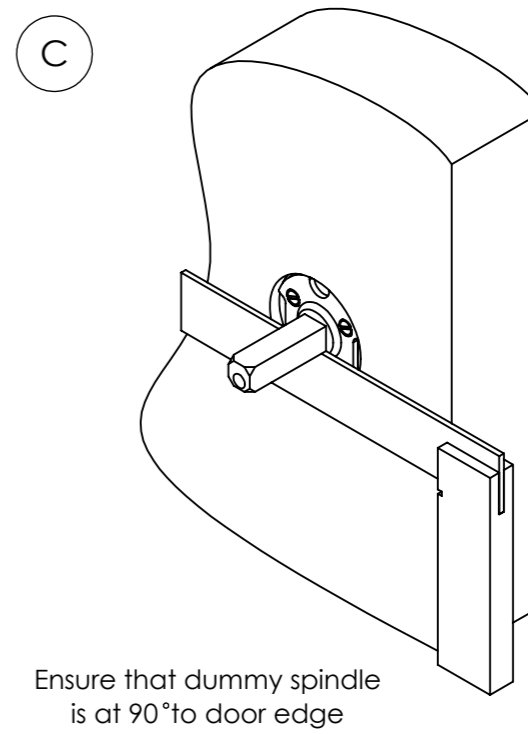


D

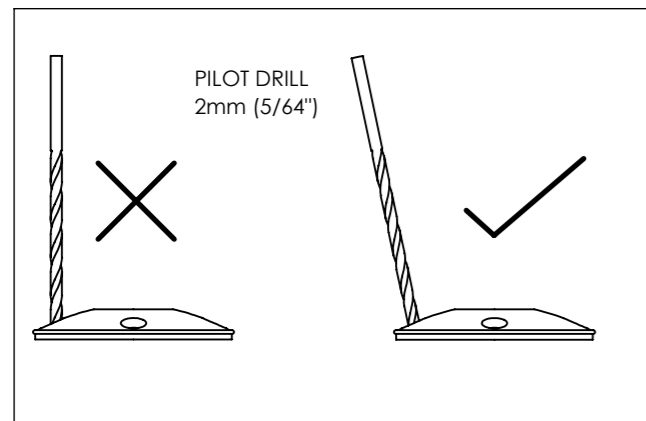


NOTE

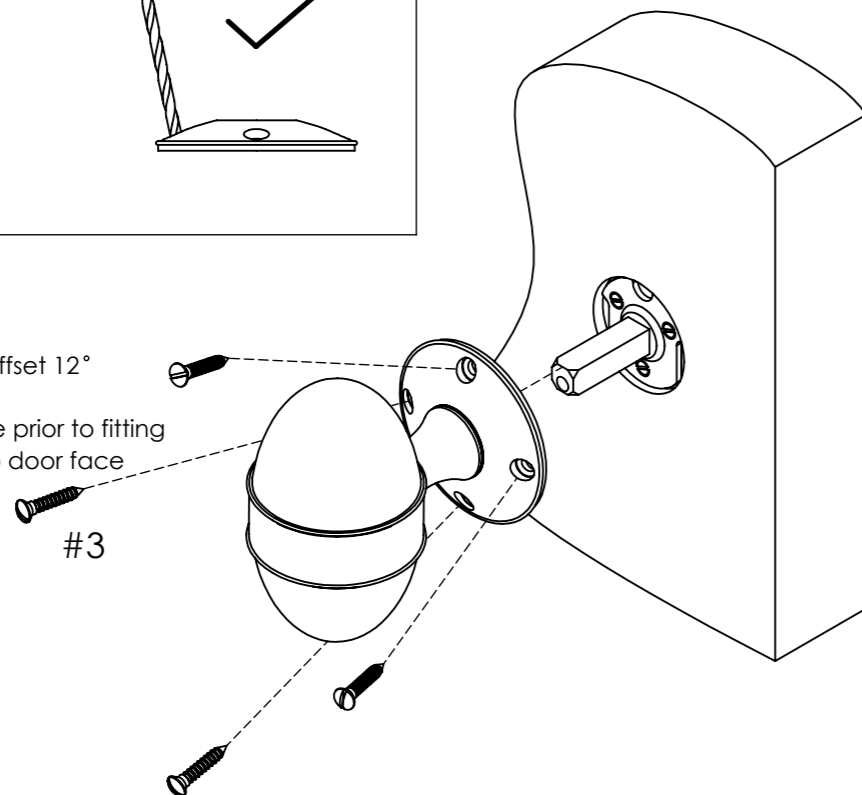


Rose fixing screws are offset 12°
Drill pilot hole at specific angle prior to fitting
Do Not drill holes square to door face

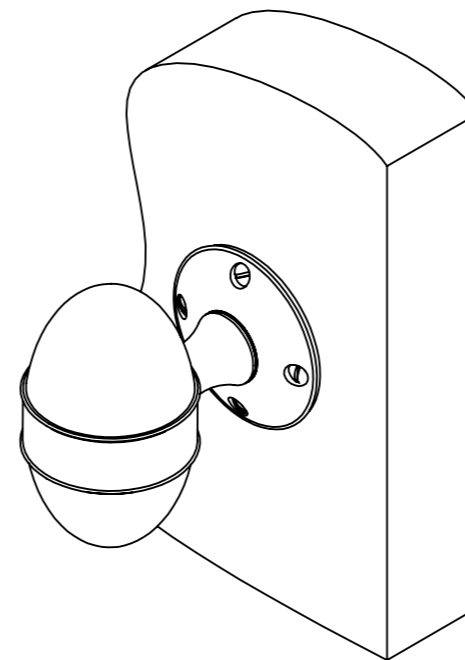

E

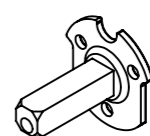

KIT

- #1  DUMMY SPINDLE
- #2  No 6 X 1 1/4" POZ C/SK
- #3  FIXING SCREWS
No 6 X 3/4" SLT/OVAL