


The **backset** is the distance from the front of the lock or latch to the centre of the spindle.


Mortice case only

Measure from face plate to
centre line of follower

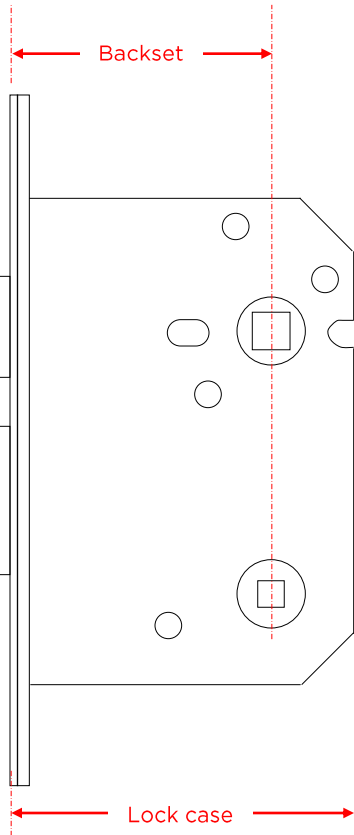

Door complete with furniture

Measure from doors leading edge to
centre line of rose or back plate

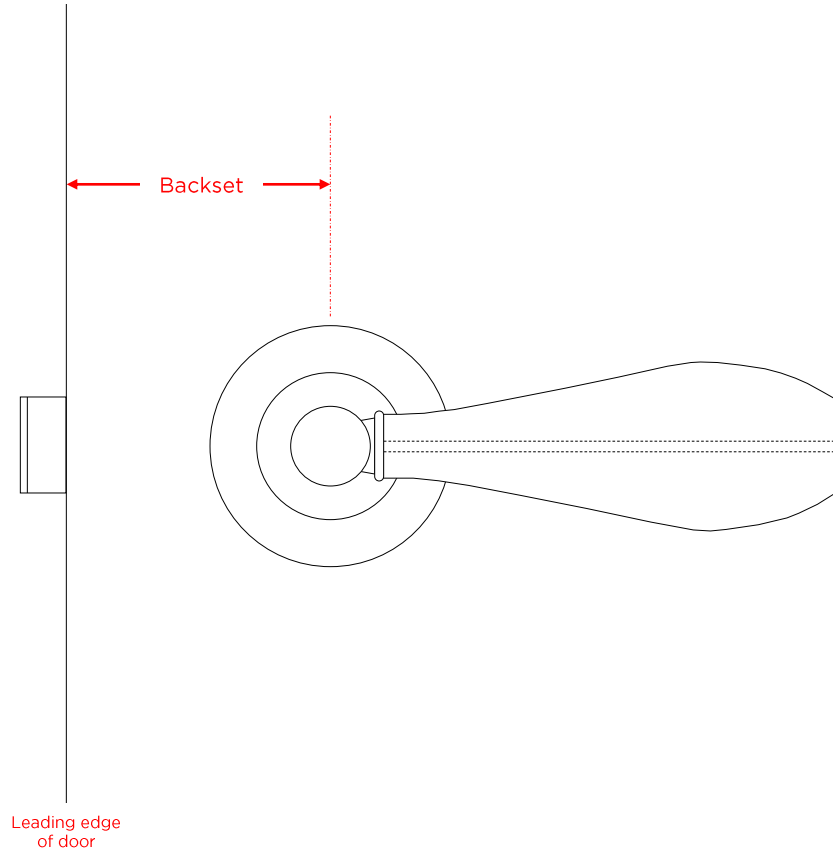

Door with furniture removed

Measure from doors leading edge to
centre line of spindle hole

