


## BACKSET MEASURING GUIDE

The backset measurement is the distance from the front face of the lock / latch to the centre of the key hole or spindle follower.


### Mortice case

Measure from face plate to centre line of follower / keyway

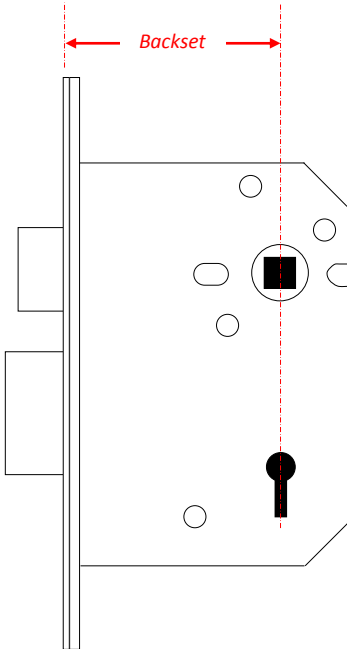

### Door with furniture removed

Measure from doors leading edge to centre line of spindle hole

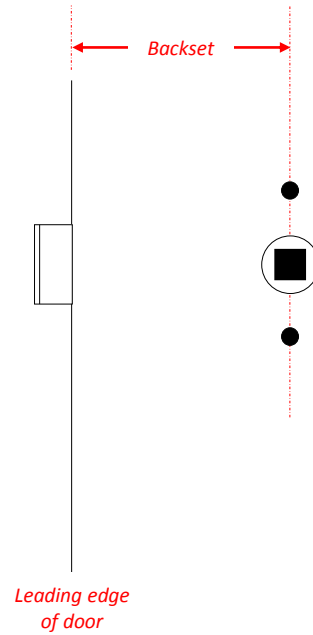

### Door complete with furniture

Measure from doors leading edge to centre line of rose or backplate

