


IMDK-005-PAIR-DOOR KNOB-STACKED & LAYER -FITTING INSTRUCTIONS

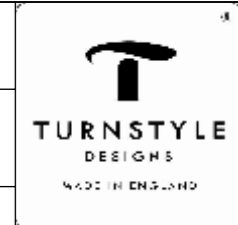

TUBULAR LATCH

A

ENSURE THAT THE LATCH IS FITTED IN ACCORDANCE WITH THE MANUFACTURERS INSTRUCTIONS

MIN DOOR THICKNESS 45MM (1-3/4")

38mm (1-1/2")

1st C/BORE Ø 19MM (3/4") 4MM (5/32") DEEP

2nd Ø 12.0mm (1/2") DRILL THROUGH

3rd PILOT DRILL Ø 1.00 FOR WOOD SCREWS

B

#1

#2

#3

#4

SLIDE INNER THREADED ROSE #1 OVER SPINDLE #2

GENTLY SLIDE THE CENTRING TOOL #3 ONTO THE SPINDLE, ENGAGE THE TOOL INTO THE INNER ROSE, PUSH UP TO DOOR FACE

FIX INNER ROSE TO DOOR USING WOOD SCREWS SUPPLIED, #4

NOTE DO NOT OVERTIGHTEN SCREWS

REMOVE CENTRING TOOL #3 ENSURING THAT IT SLIDES FREELY FROM THE INNER ROSE

C

ENSURE THAT THE CENTRING TOOL IS REMOVED BEFORE PROCEEDING

D

GENTLY SLIDE THE MORTICE KNOB ONTO THE SPINDLE UNTIL THE ROSE OUTER ENGAGES WITH THE ROSE INNER

TURN CLOCKWISE UNTIL THE OUTER IS SEATED FIRMLY ON THE DOOR FACE.

NOTE DO NOT FORCE THE INNER & OUTER OF THE ROSE TOGETHER THIS WILL CAUSE DAMAGE TO THE ROSE INNER

TIGHTEN GRUB SCREW ONTO SPINDLE WHEN ROSE IS FULLY FITTED

E

KIT

#1 THREADED ROSE INNER (X2)

#2 SPINDLE (X1)

#3 CENTERING TOOL (X2)

#4 FIXING SCREWS (X8)

#5 GRUB SCREW - M6 X 7 (X2)

#6 ALLEN KEY (X1)