


# CLASSIC ROSE - PASSAGE

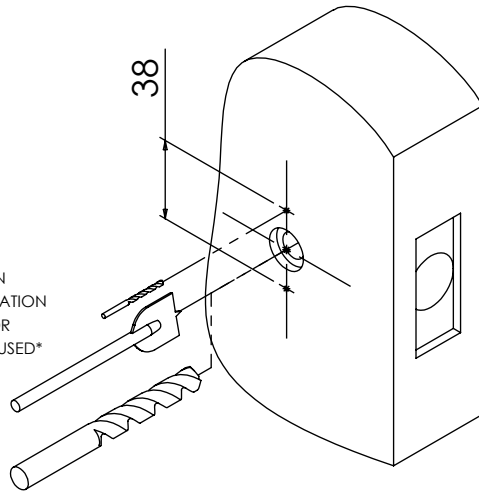


(A)

- 1 C'BORE Ø19.0MM (3/4")  
3.0MM (1/8") DEPTH  
(BOTH SIDES)
- 2 Ø12.0MM THRU
- 3 PILOT DRILL Ø2.0MM  
IN DESIRED CONFIGURATION  
\*CHECK HORIZONTAL CONFIGURATION  
ARE COMPATIBLE WITH DOOR  
THICKNESS, SCREWS AND LATCH USED\*
- 4 REPEAT ON OPPOSITE SIDE




(B)



INSTALL LATCH INTO DOOR AND  
INSERT SPINDLE (SEE DETAIL A)



DETAIL A  
ORIENTATE SPINDLE PIERCING  
HOLE TOWARDS BOTTOM

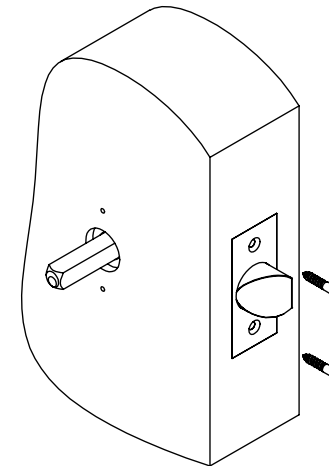


HORIZONTAL CONFIGURATION

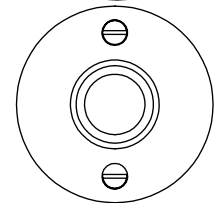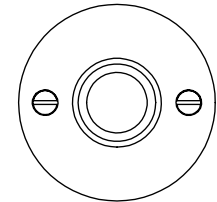


VERTICAL CONFIGURATION

(C)

- 1 INSTALL LEVER AND ROSE ASSEMBLY AND  
SCREW IN NO.6 FIXING SCREWS SUPPLIED

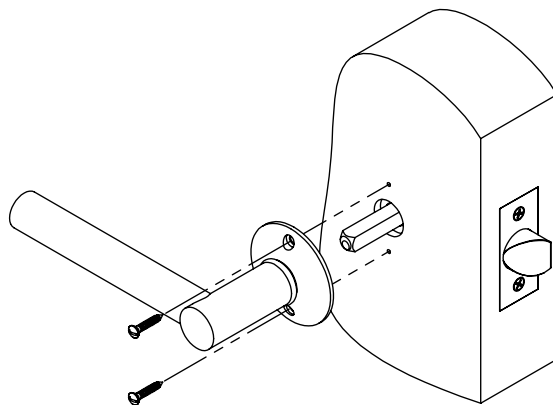


(D)

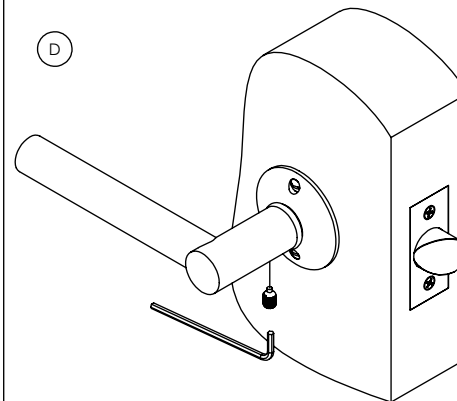


- 1 SCREW PIERING GRUB  
SCREW IN USING ALLEN KEY

(D)

- 1 REPEAT INSTRUCTIONS C AND D  
ON OTHER SIDE OF DOOR
- 2 CHECK OPERATION BEFORE  
CLOSING DOOR

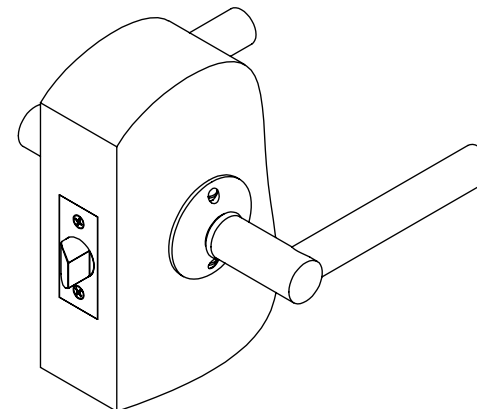

## FIXING KIT

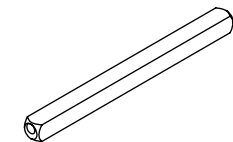

SPINDLE  
(X1)



NO.6 FIXING SCREWS  
(X4)



PIERCING SCREWS  
(2)



ALLEN KEY  
(X1)

14/11/2024

## TURNSTYLE DESIGNS – CARE OF MATERIALS AND FINISHES

### BRASS – PLATED FINISHES

*Bright Chrome (BC) - INT/EXT / Matt Black Chrome (CB) - INT/EXT / Polished Nickel (PN) - INT / Satin Nickel (SN) - INT*

Wipe clean with a soft, damp cloth and dry with a clean, soft cloth.

### BRASS – LIVING FINISHES

*Burnished Brass (BH) - INT/EXT / Burnished Nickel (NH) - INT / Fine Antique Brass (FA) - INT/EXT / Polished Brass (PU) - INT/EXT / Satin Brass (TW) - INT*

*Vintage Nickel (VN) - INT / Vintage Patina (VP) - INT/EXT*

Living finishes will develop their own individual patina over time as they react with their environment. Once installed a number of factors such as handling, age and environment will lead to gradual wear and oxidation, resulting in each piece developing a unique character and elegance. This is a natural process and is a feature, not a fault, of the base material or finishing technique.

Living finishes are supplied with a protective wax coating to protect the product during transit and installation. These finishes should be cleaned with a soft, lint free cloth, a good quality wax can be reapplied if desired. Polished Brass (PU) can be cleaned with a brass metal polish should you wish to maintain its shiny appearance.

### LEATHER

*Black (BL) - INT / Bridle White (BW) - INT / Chestnut (CN) - INT / Chocolate (CT) - INT / Slate Grey (GC) - INT / Tan (TA) - INT*

Leather is a natural material that will age over time and with use, developing a unique patina; this is part of its character and should be expected. Wipe leather surfaces clean with a soft, damp cloth using heavily diluted soapy water (1 part soap to 12 parts water) then dry with a clean, soft cloth. Once dry, the leather can be fed with a quality beeswax or neutral leather cream.

Marks and dents within the leather can be 'worked out' using a boning tool. Work the marked area in a gentle circular motion to bring the fibres and natural oils back to the surface.

### AMALFINE™

*Alupewt (AP) - INT / Black Bronze (BB) - INT / Bone (BN) - INT / Cocoa (CO) - INT / Sand (SA) - INT / Silver Bronze (SB) - INT*

Wipe clean with a soft, damp cloth or soft brush using heavily diluted warm soapy water then dry with a clean, soft cloth. Once dry the Amalfine™ can be finished with a good quality beeswax.

Do not attempt to clean any finishes with abrasive or solvent based solutions.

INT – Suitable for Interior Applications  
EXT - Suitable for Exterior Applications